


Preparation

1

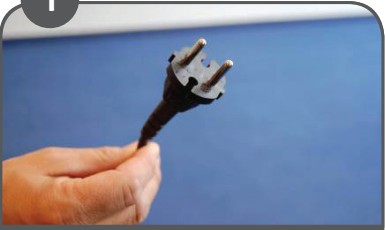

Check equipment, especially plug and cable. Report any fault or damage to a supervisor.

2



Ensure filters are in place and clean.(filters may vary)

3



Ensure bag is fitted correctly and if full, replace. Apply vacuum lid and lock both sites latches.

4



Remove the vacuum lid.

5



Locate cardboard flange into location groove and push over bag connector.

6



Apply vacuum lid and lock both sites latches.

7



Pick up large or sharp items. (always wear gloves)

8



Plug in main cord and work with cable flat to the floor, not taut.

9



Vacuum floor methodically to ensure whole area is covered.

10



Air flow can be regulated to increase/decrease suction.

11



Ensure brush strip on floor tool is up for carpet and down for hard floors.

12



When changing sockets, wind cable from machine to plug.

13



Remove fluff and debris from floor tool. Check hose for blockage.

14



Check bag and filters, change or clean as appropriate.

15



Coil cable around tidy wiping clean with damp cloth as you do.

Maintenance

Optional

16



Switch on side brooms. Recommended: Pick-up TAPI Deo to refresh the air while vacuuming.

